

## XI. Troubleshooting








- A. If the unit does not power up, consider the following tips:  
 \*Incorrect wiring  
 Solution: Double check wiring making sure connections are firm  
 \*Fuse is blown  
 Solution: Replace fuse  
 \*Voltage source is not sufficient  
 Solution: Voltage must be between 11-13.6 Volts
- B. If no sound exists, consider:  
 \*Speaker connection came loose  
 Solution: Double check connection  
 \*Bad speaker  
 Solution: Replace bad speaker with known good speaker  
 \*Output blown  
 Solution: Consult your dealer
- C. No Reception  
 \*Antenna not firmly seated in socket  
 Solution: Insert antenna firmly  
 \*Antenna tail/tails is/are balled and not spread out  
 Solution: If using a softwire antenna, extend the tail/tails as much as possible
- D. USB stick not reading  
 \*File must be a mp3 or wma file  
 Solution: Convert format to mp3 or wma

11

 
### Product Description:

This radio features state of the art Bluetooth technology allowing music to wirelessly stream from an audio source to the receiver you just purchased. Why Bluetooth? From a practical standpoint, Bluetooth enables your music device (if applicable) to be placed in a glove box, your overhead console, or even your pocket-places that are dry-without having to install a separate docking station. In addition, Bluetooth audio streaming will work with any Bluetooth enabled device, not just one brand of media. Once connected, you can use your marine receiver to control your media device and vice versa!

### The radio incorporates the following features:

-  AM/FM
-  Bluetooth Audio Streaming
-  USB input
-  Auxiliary input
-  Waterproof faceplate
-  4x50w
-  RCA out

1

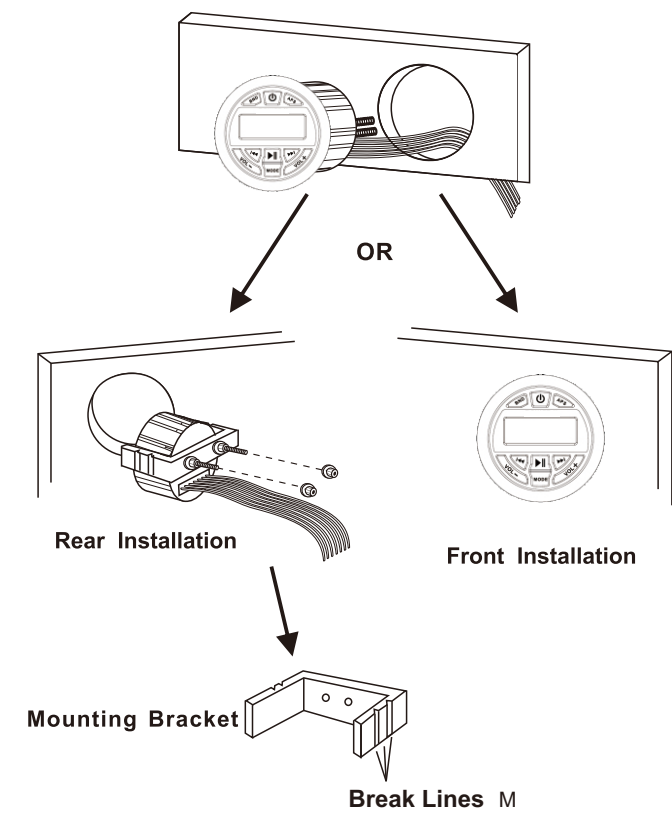

9

### APS

In USB mode, short press until display flickers, then use VOL+/VOL- buttons to search a specific track. Short press APS or Long press MODE button to accept and play.

In Radio mode, a short press of the APS results in auto seek function; a long press results in APS (Auto Pre Set) function.

### MODE

A Short press of the MODE button switches amongst Radio, USB, Bluetooth, Aux. Note: Mode USB will not show up unless a USB drive is inserted.

While in Radio mode, a long press followed by an immediate short press switches amongst BAS, TRE, BAL, FAD, LOUD on/off, US/European frequency, BEEP on/off, 12/24 hours via short press consistently.

### ▶▶

Track Up/ Tune up/Forward

### ◀◀

Track Down/ Tune Down/Reverse

## II. Radio Operation

\*Note. Due to the unique size of this radio, traditional presets do not exist. This unit does, however, offer a suitable alternative.

3

## VI. Bass, Treble, Balance, and Fader, Loud, Equalizer, US and EU Area, Beep, 24 hour/12 hour time

To adjust the above mentioned subject matter, long press the MODE button and cycle through by a quick press of the MODE button. Adjust each feature by using the VOL+/VOL-.

## VIII. Radio Frequency

### USA:

MW : 530-1710KHz,  
 FM : 87.5-107.9MHz

### Europe:

MW : 522-1620 KHz,  
 FM : 87.5-108 MHz

7

MODE/SEL button or short press APS to accept and play

D. To skip to a specific track, press SCAN/APS button until track number blinks, then use the VOL+ or VOL- button to go up or down. After that, long press MODE/SEL button or short press APS to accept and play.

## IV. Bluetooth Operation

- A. Turn Bluetooth option on in your device.
- B. Long press the MODE/SEL button on the stereo until "BT PAIR" appears.
- C. Long press the MODE/SEL button again till "BT PAIRING" displays.
- D. pick the "AudioFormz PMC-1" option on your Bluetooth enabled device (please note that if you are prompted for a password, the code entered will be "0000" (zero). A higher pitch frequency noise will alert you to the connection success.
- E. Press ▶▶ button to play song, press ▶▶ again to pause the track.
- F. A short press of the ▶▶ and ◀◀ buttons will track up or track down respectively.
- G. Certain portable music devices may very well implement their own set of instructions for pairing, so when in doubt/confusion, please consult your portable media's instruction.

5



 
## Owner's Manual

With Built In Bluetooth Audio Streaming, AM/FM USB input, Auxiliary Input, and RCA out.



## X. Wiring

### INSTALLATION OVERVIEW

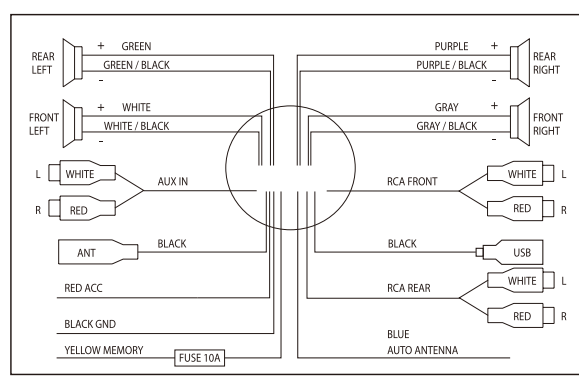

10

## I. Front Panel Layout



⏻ To turn on the unit, press the Power button. Once the unit is on, a quick press will MUTE the stereo. Once the unit is on, a long hold (pressing down for 2 seconds) of the Power button will turn the unit off.

### ▶▶

In USB and Bluetooth mode, short press this button to Play/Pause the current track.

### ▶▶/BND

In radio mode, pressing ▶▶/BND results in switching between radio bands ie FM1, FM2, FM3, AM1, AM2.

### VOL+

 
 
Volume Increase

### VOL-

Volume Decrease

2

## IX. Installation

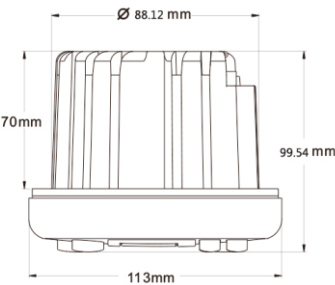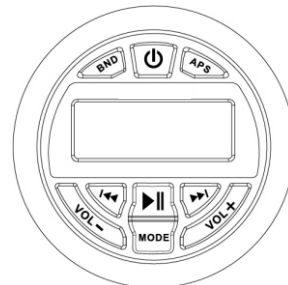

Once a suitable location is determined, drill the hole and secure the stereo using the metal mounting bracket. If the bracket needs to be shortened, remove the appropriate number of the breakaway segments using a pair of pliers.

8

A. In radio mode, short press ▶▶/BND to access AM FM. There are three FM bands and two AM bands each consisting of six presets.

B. In radio mode, long press APS button and 18 of the strongest stations will be searched and automatically programmed into the preset memory. Press again quickly to stop the auto preset process.

C. In radio mode, short press APS button to activate the scan function.

### D. ▶▶ and ◀◀ buttons

Long press each button to access manual seek mode, allowing you to go up or down the frequency scale one odd digit at a time. Short press the buttons in order to access the presets that were set in step B.

## III. USB Operation

\*Noted: Our USB slot is for USB sticks only. For play of other brands of media, please use the auxiliary input.

A. Insert a USB stick into the USB slot.  
 \*Songs must be of the mp3 or wma format\*

B. Press ▶▶ button to play songs, press ▶▶ again to pause the track.

C. A short press of the ▶▶ and ◀◀ buttons will track up or track down respectively. A long press of the ▶▶ and ◀◀ will fast forward and reverse the current track respectively.

4

## V. Auxiliary Input Mode

A. Press the Mode button until "AUX" appears on the LCD screen.

B. The use of auxiliary mode allows you to play a portable music device through the headphone jack.

6