

IC LED APP OPERATION INSTRUCTIONS



To download and install the AF LED app for your smartphone, tap or scan the links below:



Audioformz.com/af-led

TO CONNECT THE APP:

STEP 1
Make sure you have Bluetooth ON

STEP 2
Open the AF LED App and Tap the MENU ICON (Three lines) at the top left to access the Device panel

STEP 3
Tap the REFRESH ICON if you do not see your device listed

STEP 4
Your device will appear here, tap to connect

STEP 5
Tap "Control", then test to see if the LED color/pattern changes using the AF LED App

TO RESET THE LED COLORS AND PATTERN:

STEP 1
Tap the SETTINGS ICON (Gear icon) at the top right to access the Setting Center

STEP 2
Tap "Setting" at the top right

STEP 3
Under "RGB Sort" or "RGB Scheduling", select "BRG"

STEP 4
Next to "setpix" or "Set the pixel", change the value to "49"

STEP 5
Tap "Confirm" or "OK"

RF REMOTE LOCK/UNLOCK INSTRUCTIONS



The supplied RF Remote will operate any AudioFormz IC LED Lights within range. The AF LED App overrides the RF Remote.

If your lights do not respond to your RF Remote:

- 1) Press the Lock Button on the RF Remote once, the speaker LEDs will flash white twice.
This will lock or unlock the LED light color and pattern.
- 2) Test to see if the LED colors/pattern changes with the RF Remote.
(Press the Lock Button once again to undo)

NOTE: The AF LED App will override the LED light color and pattern even when locked with the RF Remote.

For any other questions or concerns please contact us at:

(888) 919-1990 or info@audioformz.com