


Can-Am Defender 2-Door & 4-Door Models



We highly recommend the installation of this stereo top to be performed by an authorized AudioFormz dealer. Warranty of stereo top and/or components may be voided if not installed correctly.



INCLUDED HARDWARE	
QTY	ITEM
6	1/4" -20 Nylon Lock Nuts
6	1/4" -20 x 2" Bolts
2	1 1/4" SS Washers (Front)
6	1" SS Washers
4	Small Silver 1/4" Washers




Step 1 (Repeat this step for both sides)

A) Using the predrilled holes, install the REAR light bar on the roof first. The rear light bar wire will fit over the rear roll bar as shown →



B) Limited/Cab Models: With the doors shut, loosen the top and bottom rear door hinges, and remove the rear window. Install foam strip above the windshield brackets. Remove the upper bolt from the top-front of the roll cage; bolt will be replaced in **Step 3B**.

C) Set the top on the roll cage and line it up.
! PUSH THE ROOF ALL THE WAY FORWARD, making sure top is even on both sides in the rear. If equipped with a rear window, reinstall it.

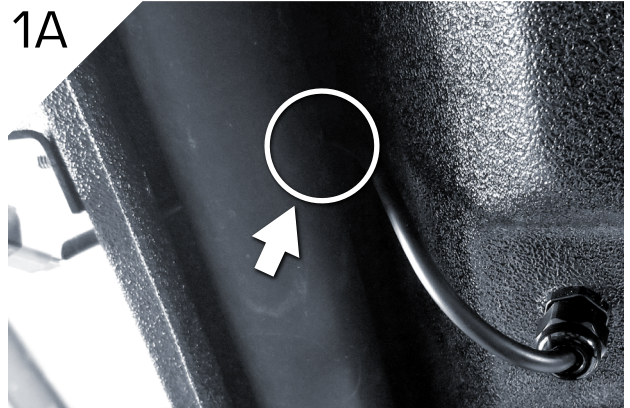

Note: If roof does not sit properly, check roll cage for squareness. All 4 corners should have equal measurements. Loosen upper cage bolts to adjust if necessary.




Step 2 (Repeat this step for both sides)

A) Find the 2 threaded locations in the back of the roll cage and line up the back of the roof with these holes (Do not pull the roof down too low). Use a small drill bit to make 2 pilot holes first, then with a 3/8" bit, drill out the pilot holes.

B) With the 1/4" -20 x 2" bolts, nuts and silver washers provided, secure the back of the roof as shown →
(Limited or Cab Models: Secure the door hinges during this step. Doors may need to be realigned.





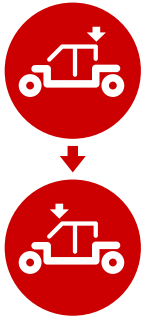

Step 3 (Repeat this step for both sides)

A) Make sure the roof is lined up and use a 1/4" bit to drill a hole through the front of the roof as shown ➔

B) Place a 1/4"-20x 2" bolt with a 1/4" SS washer through the top of the roof. Use a 1/4"-20 nylon locking nut and a 1" SS washer from underneath to secure the front of the roof as shown ➔

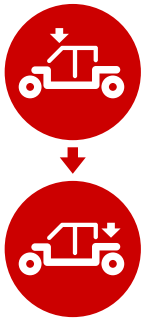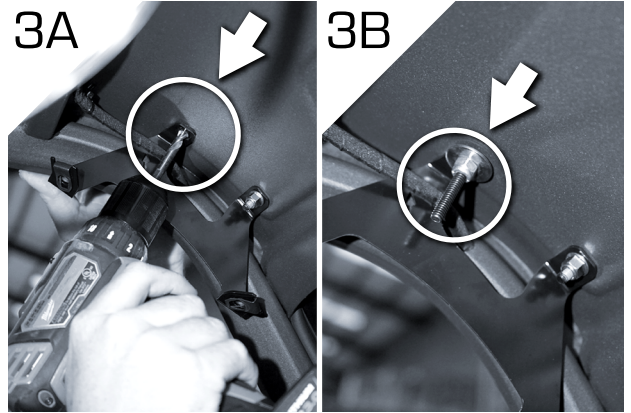

Step 4


A) Limited or Cab Models: There is a 3-post distribution block at the top-front of the roll cage. It should be connected as shown ➔ Connect the wiper hoses at the front and the rear, and the door/window harnesses towards the sides of the roof.

B) Run the wire down the roll cage to the battery. **Fuse holder must be properly installed within 18" of the battery.** Connect to the battery on the passenger side.



Fuse Holder / Battery Installation guide:

➔ [Audioformz.com/battery-connection/install](https://audioformz.com/battery-connection/install)

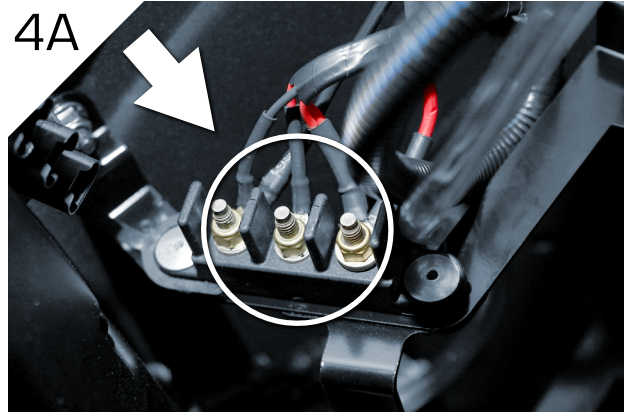

For any other questions or concerns please contact us at:

(888) 919-1990 or info@audioformz.com



Control your lights with our app!

AF LED




Download on the
App Store



GET IT ON
Google Play

AudioFormz Roof Rack

Defender - 2-Door/4-Door



We highly recommend the installation of this roof rack to be performed by an authorized AudioFormz dealer. Warranty of stereo top and/or components may be voided if not installed correctly.



MOUNTING HARDWARE			
QTY	ITEM	QTY	ITEM
2	1/4"-20 x 5" SS Bolts (Front)	2	1 1/4" SS Washers (Front top)
4	1/4"-20 x 2.5" SS Bolts	10	1" SS Washers
6	1/4"-20 Nylon Lock Nuts	2	Rubber Spacers (Front)

ASSEMBLY HARDWARE (4-Door)	
QTY	ITEM
24	Allen Head SS Bolts
24	SS Locking Flange Nuts
2	Wiring Harnesses
1	Light Bar Adjusting Tool
	Assorted Zip Ties


ASSEMBLY HARDWARE (2-Door)	
QTY	ITEM
8	Allen Head SS Bolts
8	SS Locking Flange Nuts
2	Wiring Harnesses
1	Light Bar Adjusting Tool
	Assorted Zip Ties



Step 1

Place the rack on the floor upside-down as shown ↓



1

Step 2

Attach the rear section to the sides using the supplied hex bolts and locking nuts as shown, but do not tighten. ↓

2

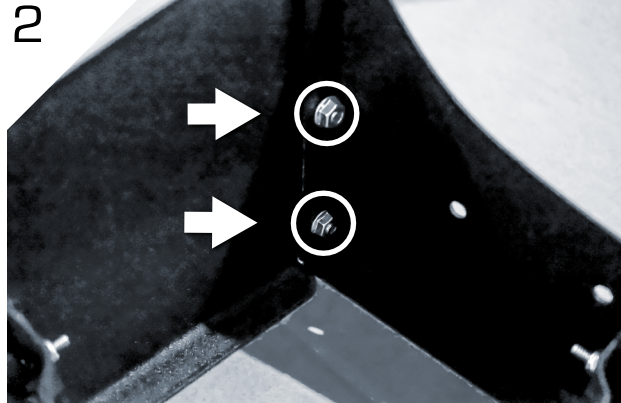



Step 3

Attach the front section to the sides using the supplied hex bolts and locking nuts as shown →

NOTE: Do not tighten bolts and nuts until AFTER roof rack is secured to the roof

3

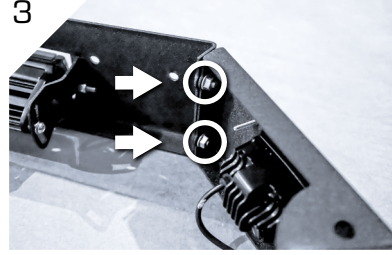




Step 4

Attach the center braces to the sides using the supplied hex bolts and locking nuts as shown ↓


4

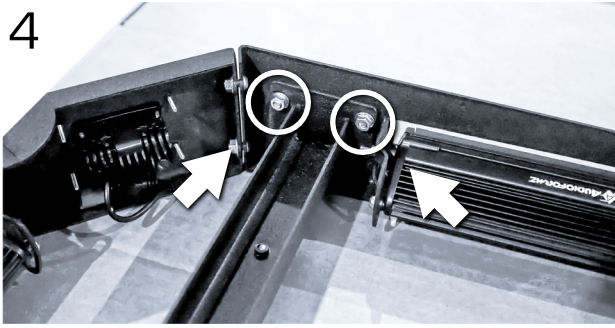

Step 5 (For models without a mesh platform, skip to Step 6.)

Flip the roof rack over and attach the mesh platform with the supplied hex bolts and locking nuts as shown ↓

5

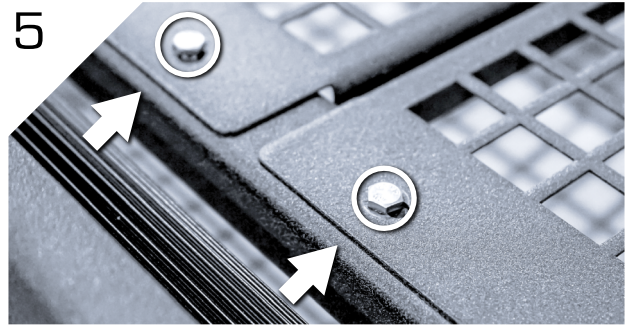


Step 6

A) Set the roof rack on top of the roof and connect all lights. Secure the rear section of the roof rack to the back of the roof using the supplied hex bolts, locking nuts and washers as shown →

B) Using the two front mounting holes of the rack as a guide, use a 3/8" bit to drill out a pilot hole through the roof from the bottom using the factory bolt holes as shown →
Secure the front section of the roof rack using the supplied rubber spacers, hex bolts and locking nuts as shown

C) Tighten all bolts and nuts on the roof rack

6A

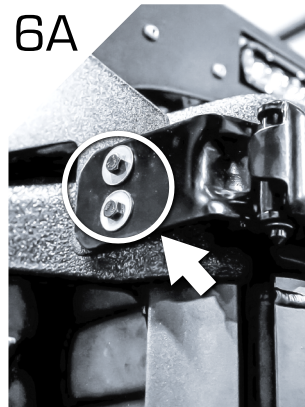

6B



NOTE: Rear of roof will be marked with white dots to drill through.

RTV Silicone is recommended to be applied under washers before securing back to roof to prevent any future leaks.

For any other questions or concerns please contact us at:

(888) 919-1990 or info@audioformz.com