



General 4 Instruction Manual

We highly recommend the installation of this stereo top to be performed by an authorized AudioFormz dealer. Warranty of stereo top and/or components may be voided if not installed correctly

Materials:

4- Custom Clamps

6 - 1 1/2" x 1/4" Bolts

6- 1/4" Nylon Lock Nuts

6- 1 1/4" Fender Washers (black)

6- Small Flat Washers

Set the top on the Roll Cage



1. Line up the holes already drilled in the front of the top with factory holes. Put the 1 ½" x ¼" bolt thru. The 1 ½" fender washer on top 1" fender washer on the bottom.




2. This is the location for the rear clamp

3. Drill ¼" hole as shown.

4. This is the location for the middle clamp

5. Drill ¼" hole as shown.

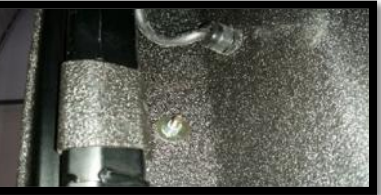

6. Install 1 ½" x ¼" bolt with 1 ½" fender washer on the top 1" fender washer on the bottom.



7. Run the power cable down the rear of the roll case. You can drill hole as shown to run the power cable to the battery



8. Install the fuse holder and terminals. Connect to the battery, under driver's seat.

FUSE HOLDER MUST BE PROPERLY INSTALLED WITHIN 18" OF BATTERY DURING STEREO TOP INSTALLATION! Warranty of stereo top and components may be voided if fuse holder is not used.

Any questions please feel free to call the office

903-873-5902 or Email info@audioformz.com