



## Segway UT10 Crew 4-Door Models

 We highly recommend the installation of this stereo top to be performed by an authorized AudioFormz dealer. Warranty of stereo top and/or components may be voided if not installed correctly.




FRONT HARDWARE	
QTY	ITEM
2	1/4"-20 x 2 1/2" Bolts
2	Large Fender Washers
2	1" Flat Washers
2	1/4"-20 Nylon Lock Nuts
2	"C" Brackets

REAR HARDWARE	
QTY	ITEM
2	1/4"-20 x 2" Bolts
2	Large Fender Washers
2	1" Flat Washers
2	1/4"-20 Nylon Lock Nuts






**Step 1** Remove the existing roof


**A) Using the predrilled holes, install the REAR light bar on the new roof first.** 

**B) Models with rear window:** Remove the factory bolts, spacers and nuts from the rear window, and remove the window. 

**C) Remove the existing roof.**

**D) Remove the rear corner cage braces from the roll cage on each side.** 

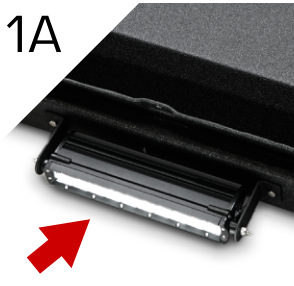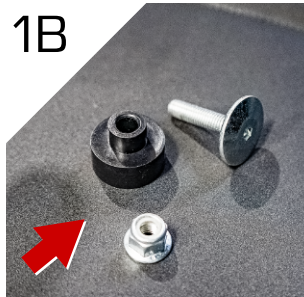



**Step 2** Set the new roof on roll cage

**A) Set the top on the roll cage and line it up.**

**B) IMPORTANT: PUSH THE ROOF ALL THE WAY FORWARD,** making sure the roof is even on both sides in the rear.



**We recommend 2+ people to help install**


**Roofs require team lift!**


**IMPORTANT:** If roof does not sit properly, check roll cage for squareness. All 4 corners should have equal measurements. Loosen upper cage bolts to adjust if necessary. Contact AudioFormz for further assistance.



Repeat this step for both sides


### Step 3 Secure the front of the roof

**A)** Locate the supplied "C" bracket. It will be installed facing the direction shown. 

**B)** Place the "C" bracket between the front corner tab on the roll cage and pre-drilled mounting holes at the top of the roof. Place a 1/4"-20 x 2 1/2" bolt with a large fender washer through the roof, the "C" bracket, and the factory mounting hole on the front corner tab of the roll cage as shown. 

**C)** Hand tighten the nylon lock nut with the 1" flat washer from underneath.

3A

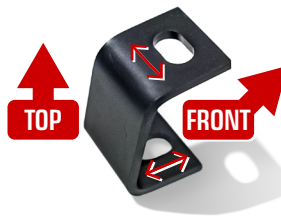


3B




Repeat this step for both sides

### Step 4 Secure the rear part of the roof


**A)** There is a tab at the back of the roll cage with a mounting hole. Using this as a guide, make a pilot hole from the bottom with a small drill bit first. Then with a 1/4" bit, drill out the pilot hole as shown. 

**B)** Place a 1/4"-20 x 2" bolt with a large fender washer through the top of the roof. Use a 1/4"-20 nylon locking nut and a 1" flat washer from underneath to secure the back of the roof.


**C)** Tighten all bolts and nuts from the previous steps.

**D)** Models with rear window: Reinstall the window using the factory hardware from **Step 1B**. 


4A

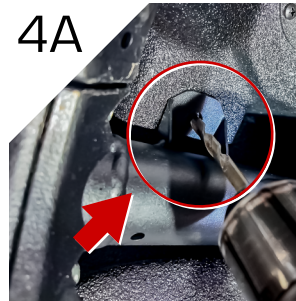

4D

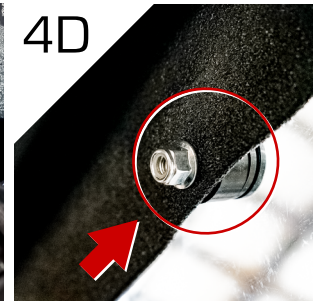

### Step 5 Connect roof to power


**A)** Run the wire down the roll cage to the battery. **Fuse holder must be properly installed within 18" of the battery.** Connect to the battery on the passenger side. 



**Fuse Holder / Battery Installation guide (PDF)**

➔ [Audioformz.com/battery-connection/install](https://audioformz.com/battery-connection/install)

5A

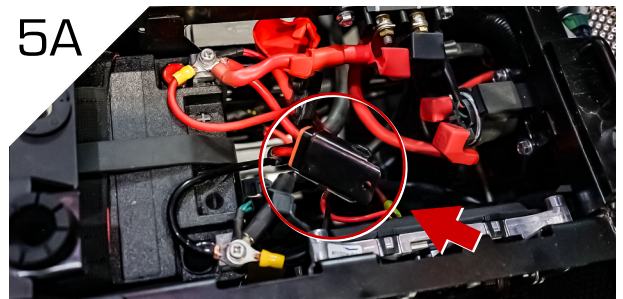

**For any other questions or concerns please contact us at:**

**(888) 919-1990 or [info@audioformz.com](mailto:info@audioformz.com)**




**To download and install the AF LED app for your smartphone, tap or scan here ➔**



**AF LED App / RF Remote Operation Instructions (PDF)**

➔ [Audioformz.com/af-led-operation](https://Audioformz.com/af-led-operation)

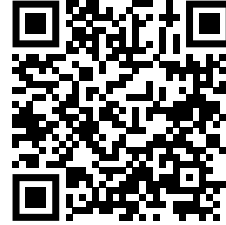

**[Audioformz.com/af-led](https://Audioformz.com/af-led)**