



For any other questions or concerns,  
Please contact us at  
(903) 873-5902  
infor@audioformz.com



# AUDIOFORMZ TRXSS INSTRUCTION MANUAL



## Supplied Hardware: (steps 1-2)

Front – two (2) self-tapping screws, two (2) 1 5/8” clamps

Back – two (2) 1.5” black bolts, two (2) black flat washers,  
two (2) ¼-20 lock nuts, two (2) silver flat washers

## Supplied Hardware (steps 7-9):

Electric – one (1) fuse holder, one (1) fuse, two (2) ring terminals

**7**

Using supplied barrel connector, crimp red fuse holder to white/red wire.

(And second fuse holder on red wire on amplified tops).



**8**

Crimp ring terminal on all negative wiring (black or green wire) and fuse holders to connect to battery.


(And second ring terminal on red wire on amplified tops).



**9**

Connect black/green wire to negative post ( - ) of battery.

Connect fuse holder(s) to positive post ( + ) of battery.

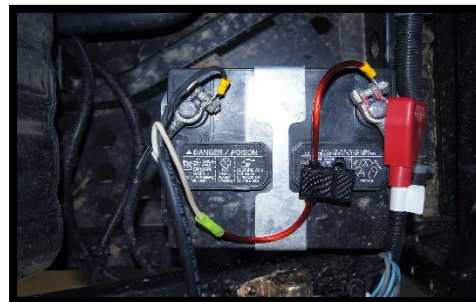

**1**

Pre-marked white mark shows where the metal backing plate is located on the front of top. Pre-drill hole within 1” of mark with a 3/16” drill bit.



**2**

Use the supplied self-tapping screws and drill within 1” of white marks into front inside of top, through the clamp holes, as shown.



\*We recommend using an impact drill for this step  
\*\*It is important that you drill within 1” of the white marks. Failure to do so will result in improper installation and will void your warranty.



**3**

Finished front clamps should look like this.



**5**

Finished back bolts should look like this.



**4**

Move to back of top. Make sure that back of top is level with machine.

Using rear factory hole locations (on bike) as a guide, pre-drill top using a 3/16" drill bit.



**6**

This is where to place the wires to lead into battery.

(You can secure wires down with the zip ties provided).