

## Polaris Xpedition XP 5 4-Door / Crew



We highly recommend the installation of this stereo top to be performed by an authorized AudioFormz dealer. Warranty of stereo top and/or components may be voided if not installed correctly.



### ROOF HARDWARE

| QTY | ITEM                 |
|-----|----------------------|
| 10  | 1.5" Sealing Washers |
|     | Assorted Zip Ties    |

### ROOFS WIRED FOR RIDE COMMAND INCLUDE:

|    |                      |
|----|----------------------|
| 1* | Ride Command Harness |
|----|----------------------|

\* Roofs with subwoofers include 2 harnesses



### Step 1 Remove factory headliner

**A)** Use a 5mm Allen bit to remove the two bolts securing the rearview mirror. Keep these bolts for later. 


**B)** Use a T40 torx bit to remove the four bolts at the front of the headliner. Keep these bolts for later. 

**C)** Use a T30 torx bit to remove the two bolts securing the dome light and unplug it. 


**D)** Use a T30 torx bit to remove the remaining six bolts from the front headliner section and remove it. Headliner panel may be discarded.

**E)** Use a T30 torx bit to remove the nine bolts from the rear headliner section and remove it. Headliner panel may be discarded. 


1A

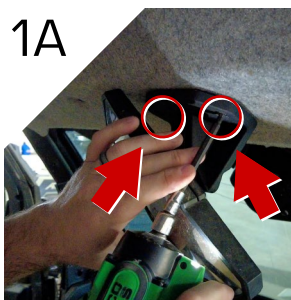

1B

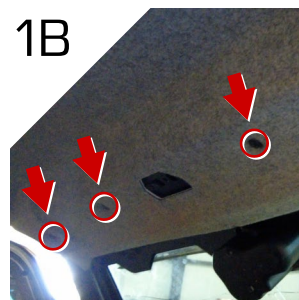

1C

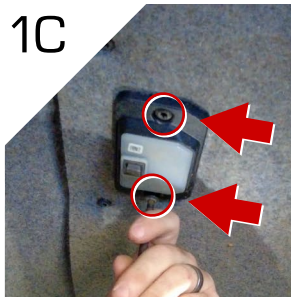

1E



### Step 2 Remove roof speakers

**A)** Use a T40 torx bit to remove the two bolts holding the speaker as shown. Unplug the speaker and repeat for the other side. Speakers may be discarded. 


2A





### Step 3 Remove factory harness



**A)** Unplug the factory harness and unclip it from the roof by tugging down firmly next to each clip. Harness may be discarded.  3A ➔

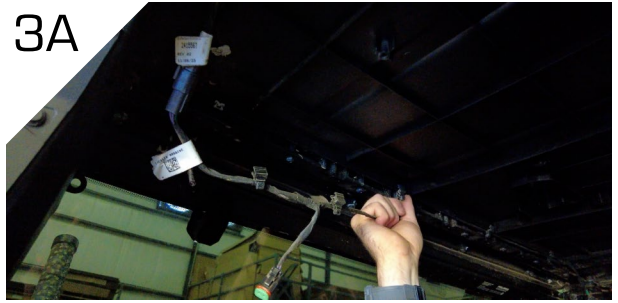

### Step 4 Unbolt and remove old roof

**A)** Use a T40 torx bit to remove the five bolts at the front of the roof.  4A ➔

**B)** Use a T40 torx bit to remove the ten top-side bolts and nuts securing the roof. Slide the nuts back into place after removal. Keep the bolts to use later.  4B ➔

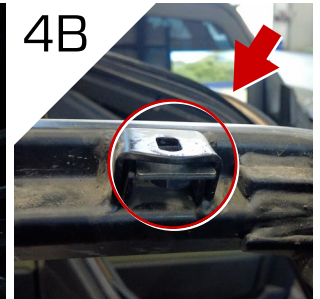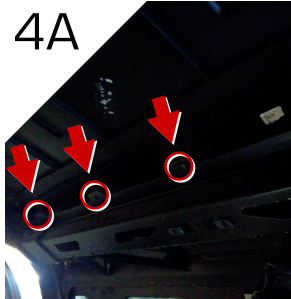

### Step 5 Place new roof on roll cage

**A)** With some friends' help, place the new roof on the roll cage. We recommend having at least 2 people to lift the roof and 1 person inside the cab to help with roof placement. Once the new roof is on, double check the 5 nuts on each side of the cage to make sure they didn't slide out of position and still line up with the mounting holes on the side of the roof.



**We recommend 2+ people to help install  
Roofs require team lift!**



### Step 6 Fasten roof bolts


**A)** At the top of the roof, install the ten bolts removed from the old roof with the supplied 1.5" sealing washers. Make sure they thread correctly into the nuts on the cage, and tighten them snug.  6A ➔



### Step 7 Install overhead panel

**A)** Use a T40 torx bit to secure the supplied front overhead panel using the four bolts from Step 1B. Tuck any remaining wires behind the panel before tightening the bolts. Use supplied zip ties as needed.  7A ➔

**B)** Use a 5mm Allen bit to reinstall the rearview mirror with the two bolts from Step 1A.  7B ➔

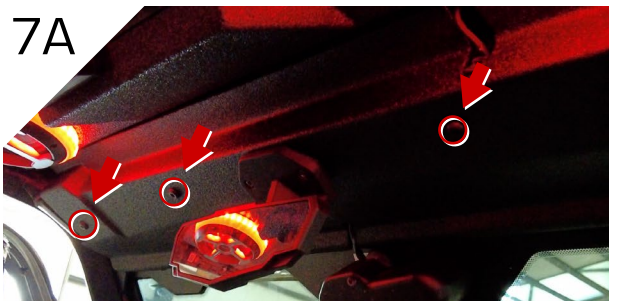





### Step 8 Remove seat and battery cover

**A)** At the base of the front driver's seat, use a T40 torx bolt to remove the two bolts securing it at the front. Slide the seat forward and upward, remove it and set it to the side.  **8A** ➔

**B)** Use a flathead screwdriver to unlock the battery cover. Remove it and set it to the side.

8A



### Step 9 Connect roof to power

**A)** Run the two power wires straight down along the B-pillar towards the battery. Use supplied zip ties as needed.

**B)** Use a 1" hole saw or a 3/8" drill bit at the rear-side of the battery compartment to give power wires access to the battery, and feed the wires through the hole(s).  **9B** ➔

**C)** Use a 13mm socket/wrench to remove the negative terminal nut, and attach the negative/ground cable.

**D)** Fuse holder must be properly installed within 18" of the battery. Connect to the positive terminal on to the battery.

**D)** Reinstall the battery cover and driver's seat.

9B



**Fuse Holder / Battery Installation guide (PDF)**

➔ [Audioformz.com/battery-connection/install](https://audioformz.com/battery-connection/install)

**For any other questions or concerns please contact us at:**

**(888) 919-1990 or [info@audioformz.com](mailto:info@audioformz.com)**



**To download and install the AF LED app for your smartphone, tap or scan here ➔**



**AF LED App / RF Remote Operation Instructions (PDF)**

➔ [Audioformz.com/af-led-operation](https://audioformz.com/af-led-operation)



**[Audioformz.com/af-led](https://audioformz.com/af-led)**